





 








Legend




-  Rotate the "Twist-n-Touch" knob clockwise
-  Rotate the "Twist-n-Touch" knob CCW
-  Push and rotate the "Twist-n-Touch" knob clockwise
-  Push and rotate the "Twist-n-Touch" knob CCW
-  Double click the "Twist-n-Touch" knob
-  Single click the "Twist-n-Touch" knob

Setting the clock

 





-   = Move cursor left and right
-   = Adjust setting selected
-  = Jump from setting Time to setting Date.
-  = Save your changes.

Note: On exit, you will be asked if you want to keep your changes.




-   = Move cursor left and right to highlight Yes or No.
-  = Make your selection and return to previous menu.

Adjusting Squelch

 








-   = Adjust setting selected
-  = Save your changes.

Note: On exit, you will be asked if you want to keep your changes.




-   = Move cursor left and right to highlight Yes or No.
-  = Make your selection and return to previous menu.

Radio Settings




-  = Jump to settings line.
-   = Move cursor left and right
-   = Adjust setting highlighted by the cursor
-  = Save your changes.

Note: On exit, you will be asked if you want to keep your changes.

-   = Move cursor left and right to highlight Yes or No.
-  = Make your selection and return to previous menu.

Quick Reference Guide for the RXC-3000 Twist-n-Touch ©

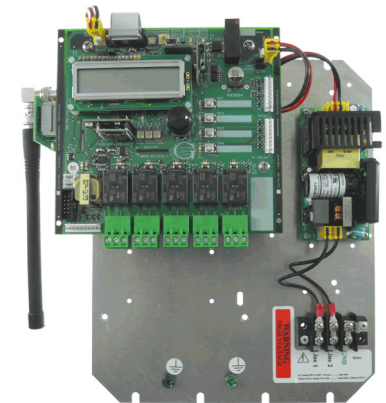


Genave Electronics


24234 Chesley Trail
Hampton, MN 55031
www.genave.com

Doc no. 9000-0000-039 R2

RXC-3000 Main Screens

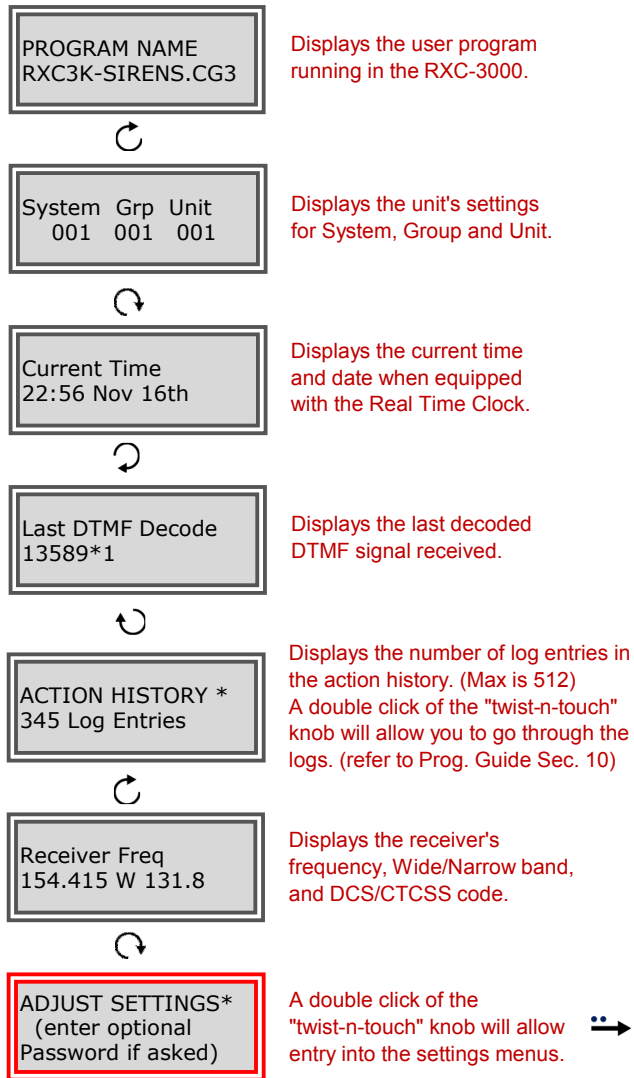

"Adjust Settings" Screens

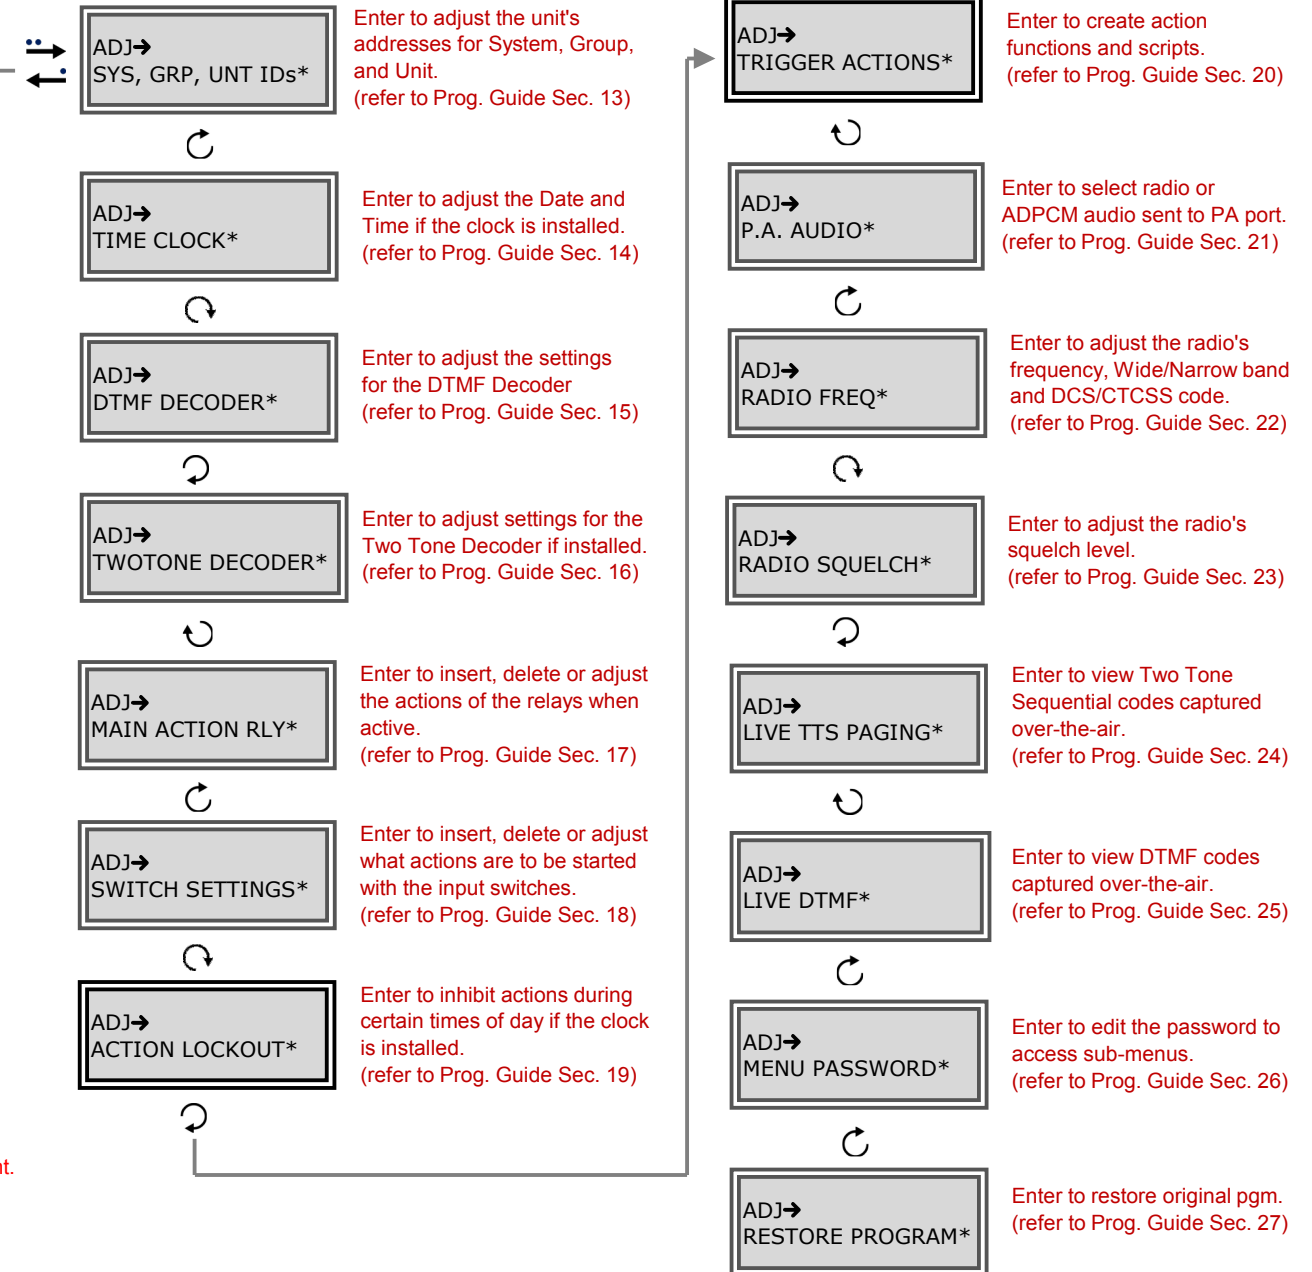

Note: Sub-menu screens will time out in 3 minutes and return the RXC-3000 to normal operation without Twist-n-Touch knob movement.
LIVE DTMF* and LIVE TTS PAGING* do not time out.