


Example wiring method to control heavy loads with the RXC-3000

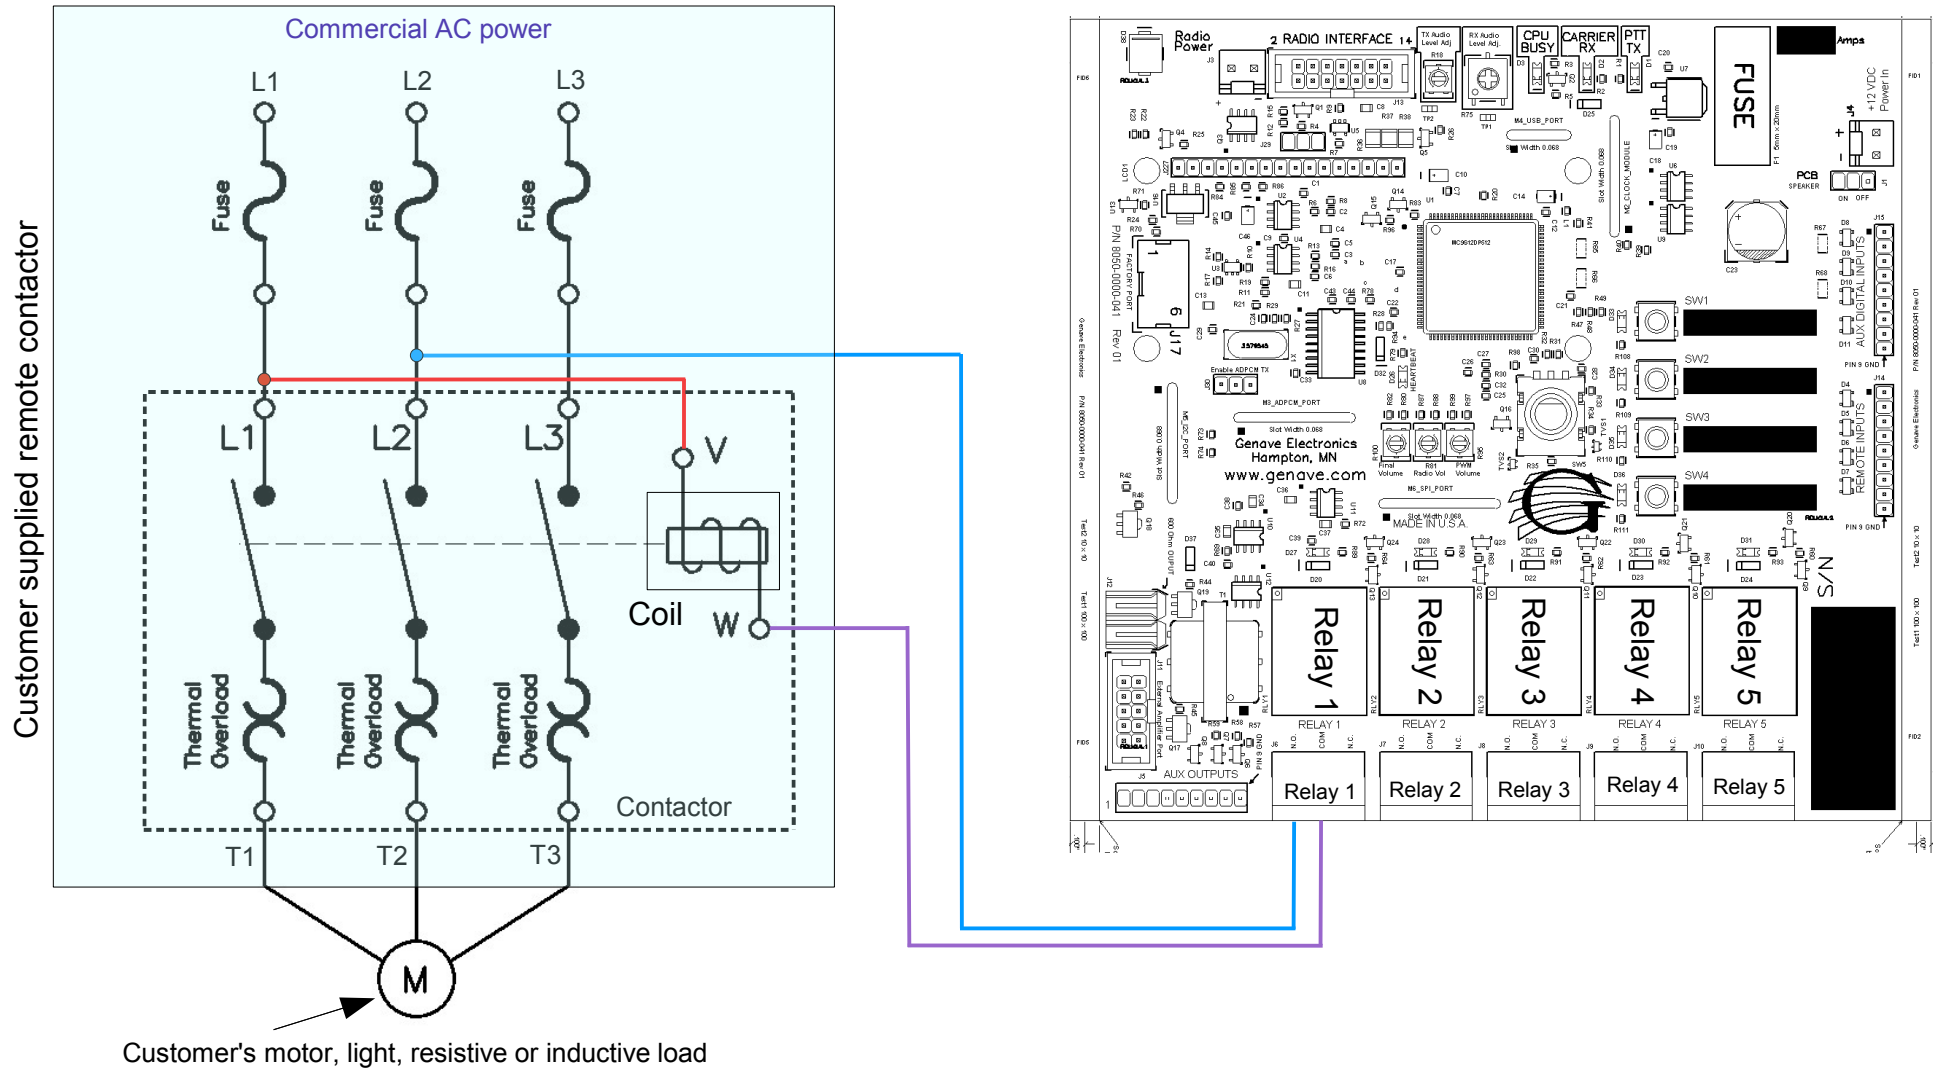

In this example, when relay #1 on the RXC processes the radio command to engage, it completes the coil circuit of the contactor. The contactor then turns on and lets the voltage flow to the customer's device.

- Turn off ALL power before working on any electrical equipment.
- Follow all applicable electrical and safety rules and regulations.
- This is only an example. Your contactor and wiring may differ.
- Electrical work should only be performed by licensed and qualified personnel.